

Contents

Chapter 1 Specification	9
1-1 85ERV / 85ERV-L Components and Options	10
1-2 Mainboard Specifications	11
1-2.1 CPU Socket	11
1-2.2 System Chipsets	11
1-2.3 Memory	11
1-2.4 AMI BIOS	11
1-2.5 Accelerated Graphics Port (AGP) Interface	11
1-2.6 Advanced System Power Management:	12
1-2.7 Multi-I/O Functions :	12
1-2.8 Expansion Slots	12
1-2.9 AC'97 Audio Codec on board	13
1-2.10 LAN on board (85ERV-L only)	13
1-2.11 Hardware Monitor on board	13
1-2.12 6-channel Sound Output Support (optional)	13
1-2.13 Form Factor	13
1-3 Mainboard Specification Table	14
1-4 Chipset System Block Diagram	15
Chapter 2 Hardware Setup	16
2-1 CPU Installation with Socket 478B	17
2-2 Pentium 4 CPU Fan Installation	18
2-3 Memory Installation with Warning LED	19
2-3.1 To Install DDR SDRAM Module for this series	19
2-3.2 To Remove a DIMM	19
2-4 AGP 4X/8X Slot Installation	20
2-5 IDE Connector Installation	21

2-6 Flopy Drive Connector (FDC) Installation	22
2-7 ATX V 2.03 Power Supply Installation	23
2-8 Jumper Settings	24
2-8.1 Jp1: CPU Clock/Overclock Select	25
2-8.2 JBAT1: Clear CMOS	26
2-8.3 Jp2: Flash ROM Write Protection	27
2-9 Other Connectors Configuration	28
2-9.1 On-board FAN Connectors	28
2-9.2 Connector WOL1: Wake On LAN.....	29
2-9.3 CD-ROM Audio Connector (CD1)	29
2-9.4 Audio 1: 6-channel Sound Output Connector (optional)	30
2-9.5 Chassis Panel Connectors	30
2-9.6 RJ45: LAN Connector (85ERV-L only)	31
2-9.7 PS/2 Mouse And PS/2 Keyboard	31
2-9.8 Thermal Sensor Connectors RT1 and RT2	32
2-9.9 Complex Pin-header	33
2-9.10 USB Ports and USB Pin Headers.....	35
2-10 IRQ Description	36
Chapter 3 Software Setup	38
3-1 Open Up Suport CD:	39
3-2 Proceed to VIA 4-IN-1 Drivers Installation	40
3-3 AC'97 Audio Driver Installation	42
3-4 Install USB 2.0 Driver for Win98 / Me / 2000 / XP	43
3-5 Install Hardware Monitor Utility	45
3-5.1 Installation	45
3-5.2 Verification	46
3-6 Install VIA LAN Drivers (for 85ERV-L only)	47

3-6-1. VIA6183 LAN driver on Windows 9X	47
3-6-2. VIA6183 LAN driver on Windows NT4.0	49
3-6-3. VIA6183 LAN driver on Win ME / 2000 / XP	50
Chapter 4 AMI BIOS Setup	52
4-1 About BIOS Setup	53
4-2 To Run BIOS Setup	53
4-3 About CMOS	53
4-4 The POST (Power On Self Test)	53
4-5 To Update BIOS	54
4-6 BIOS SETUP --- CMOS Setup Utility	56
4-6.1 CMOS Setup Utility	56
4-6.2 Standard CMOS Setup	57
4-6.3 Advanced BIOS Features	60
4-6.4 Advanced Chipset Features	63
4-6.5 Power Management Features	66
4-6.6 PNP / PCI Configurations	69
4-6.7 Integrated Peripherals	71
4-6.8 Hardware Monitor Status	74
4-6.9 Frequency/Voltage Control	76
4-6.10 Set Supervisor Password	78
4-6.11 Load Optimized Defaults	80
4-6.12 Save & Exit Setup	80
4-6.13 Exit Without Saving	80