

# Contents

<b>Chapter 1 Specification .....</b>	<b>10</b>
<b>1-1 Mainboard Specifications .....</b>	<b>11</b>
1-1.1 CPU Socket .....	11
1-1.2 System Chipsets .....	11
1-1.3 Memory .....	11
1-1.4 AWARD BIOS V6.0 .....	11
1-1.5 Accelerated Graphics Port (AGP) Interface .....	11
1-1.6 Advanced system Power Management, supporting: .....	12
1-1.7 Multi-I/O Functions: .....	12
1-1.8 Expansion Slots .....	12
1-1.9 Hardware Monitor on board .....	13
1-1.10 AC'97 Audio Codec on board .....	13
1-1.11 LAN (Local Area Network) on board (for 85MIV-L only) .	13
1-1.12 Form Factor .....	13
<b>1-2 Mainboard Specification Table .....</b>	<b>14</b>
<b>1-3 Chipset System Block Diagram .....</b>	<b>15</b>
<b>Chapter 2 Hardware Setup .....</b>	<b>16</b>
<b>2-1 CPU Installation with Socket 478B .....</b>	<b>17</b>
2-1.1 To Identify a Pentium 4 CPU .....	17
2-1.2 CPU Installation with Socket 478B .....	18
<b>2-2 Pentium 4 CPU Fan Installation: .....</b>	<b>19</b>
<b>2-3 Memory Installation .....</b>	<b>20</b>
2-3.1 To Install DDR SDRAM Module for this Mainboard : .....	20
2-3.2 To Remove a DIMM: .....	20
<b>2-4 AGP (Accelerated Graphics Port) Card Installation : ....</b>	<b>21</b>
<b>2-5 HDD/FDD Installation .....</b>	<b>22</b>
<b>2-6 ATX V 2.03 Power Supply Installation .....</b>	<b>24</b>

<b>2-7 Jumper and Switch Settings .....</b>	<b>25</b>
2-7.1 Jp6 and SW1: CPU Clock/Overclock Select.....	26
2-7.2 JBAT1: Clear CMOS .....	28
2-7.3 Jp7: Built-in LAN Select (for 85MIV-L only).....	28
<b>2-8 Other Connectors Configuration .....</b>	<b>29</b>
2-8.1 On Board FAN Connectors .....	29
2-8.2 CD-ROM Audio Connector CD_IN1 .....	30
2-8.3 Chassis Panel Connector .....	30
2-8.4 Thermal Sensor Connector RT1, RT2 .....	31
2-8.5 Complex Header .....	32
2-8.6 USB Ports and USB Header (Header USB 3) .....	34
2-8.7 PS/2 Mouse And PS/2 Keyboard .....	34
2-8.8 COM 2 Header for one Serial Port.....	35
2-8.9 Rj45 Connector ( for 85MIV-L only) .....	36
<b>2-9 IRQ Description .....</b>	<b>37</b>
<b>Chapter 3 Software Setup .....</b>	<b>38</b>
3-1 Open up Support CD: .....	39
3-2 Proceed to VIA 4-in-1 Driver Installation .....	40
3-3 Proceed to AC'97 AUDIO Driver Installation .....	42
3-4 Proceed to DirectX Installation.....	43
3-5 Proceed to Graphics Driver Installation .....	44
3-6 Proceed to Hardware Monitor Installation.....	45
3-7 Install RTL8139C LAN Driver (for 85MIV-L only) .....	47
3-7-1. RTL8139C LAN driver on Windows 9X .....	47
3-7-2. RTL8139C LAN driver on Windows NT4.0 .....	49
3-7-3. RTL8139C LAN driver on Win ME / 2000 / XP .....	50
<b>Chapter 4 BIOS Setup .....</b>	<b>52</b>
4-1 About BIOS Setup .....	53
4-2 To Run BIOS Setup .....	53

<b>4-3 About CMOS .....</b>	<b>53</b>
<b>4-4 The POST ( Power On Self Test ) .....</b>	<b>53</b>
<b>4-5 To Upgrade BIOS .....</b>	<b>54</b>
4-5.1 Before Upgrading BIOS .....	54
4-5.2 Upgrade Process.....	54
<b>4-6 BIOS SETUP --- CMOS Setup Utility .....</b>	<b>57</b>
4-6.1 CMOS Setup Utility .....	57
4-6.2 Standard CMOS Setup .....	58
4-6.3 Advanced BIOS Features .....	61
4-6.4 Advanced Chipset Features .....	65
4-6.5 Integrated Peripherals .....	71
4-6.6 Power Management Setup .....	77
4-6.7 PNP / PCI Configuration .....	83
4-6.8 SmartDoc Anti-burn Shield (PC Health status).....	86
4-6.9 Frequency/Voltage Control .....	88
4-6.10 Load Optimized Defaults .....	90
4-6.11 SET SUPERVISOR / USER PASSWORD .....	91
4-6.12 SAVE & EXIT SETUP .....	92
4-6.13 EXIT WITHOUT SAVING .....	92
<b>APPENDICES .....</b>	<b>94</b>
Appendix-1 Identify BIOS Version & BIOS Part Number ...	95
Appendix-2 Identify Mainboard Model Number .....	96
Appendix-3 Technical Terms .....	97