

Contents

Chapter 1 Specification	9
1-1 Series 85DR2 Components Locations and Options	10
1-2 Mainboard Specifications	11
1-2.1 CPU Socket	11
1-2.2 System Chipsets	11
1-2.3 Memory	11
1-2.4 AMI BIOS	11
1-2.5 Accelerated Graphics Port (AGP) Interface	11
1-2.6 Advanced System Power Management:	12
1-2.7 Multi-I/O Functions :	12
1-2.8 Expansion Slots	12
1-2.9 AC'97 Audio Codec on board	12
1-2.10 LAN on board (85DR2-L and 85DR2+-L only)	13
1-2.11 RAID Controller on board (85DR2+ and 85DR2+-L only)	13
1-2.12 Hardware Monitor on board	13
1-2.13 6-channel Sound Output Support (optional)	13
1-2.14 Redstorm Overclocking Technology (optional)	13
1-2.15 Form Factor	13
1-3 Mainboard Specification Table	14
1-4 Chipset System Block Diagram	15
Chapter 2 Hardware Setup	16
2-1 CPU Installation with Socket 478B	17
2-2 Pentium 4 CPU Fan Installation	18
2-3 Memory Installation with Warning LED	19
2-3.1 To Install DDR SDRAM Module for this series	19
2-3.2 To Remove a DIMM	19

2-3.3 Warning LED2: DIMM Slot Powered On:	20
2-4 AGP 4X Installed with Jumper and LED Safeguard	21
2-5 IDE Connector Installation	22
2-6 Floppy Drive Connector (FDC) Installation	23
2-7 ATX V 2.03 Power Supply Installation	24
2-8 Jumper Settings	25
2-8.1 JAGP1 & JAGP2: AGP Voltage Select	26
2-8.2 Jp2: 1.5V AGP4X Safeguard	26
2-8.3 JBAT1: Clear CMOS	27
2-8.4 Jp3 & Jp4: DIMM Voltage Select:.....	27
2-8.5 Jp16: LAN Controller Select (85DR2-L and 85DR2+-L)	28
2-8.6 Jp17: RAID Controller Select (85DR2+ and 85DR2+-L)	28
2-8.7 Jp18: CPU Clock Select	29
2-8.8 Jp19: K/B / Power Button Power On	29
2-9 Other Connectors Configuration	30
2-9.1 On Board FAN Connectors	30
2-9.2 Connector WOL1: Wake On LAN.....	31
2-9.3 CD-ROM Audio Connector (CD_IN1).....	31
2-9.4 AUX1: Audio Input Connector	32
2-9.5 Chassis Panel Connectors	32
2-9.6 Rj45: LAN Connector (85DR2-L and 85DR2+-L only)	33
2-9.7 PS/2 Mouse And PS/2 Keyboard	33
2-9.8 Thermal Sensor Connectors RT1 and Jp9	34
2-9.9 Complex Header	35
2-9.10 USB Ports and USB Headers	37
2-9.11 Audio 1: 6-channel Sound Output Connector (optional) ...	38
2-10 IRQ Description	39
Chapter 3 Software Setup	40
3-1 Open up the Support CD.....	41
3-2 Install “Intel Chipset Software Installation Utility”	42

3-3 Install “Intel Application Accelerator”	43
3-4 AC’97 Audio Driver Installation	45
3-5 Install Hardware Monitor Utility	46
3-5.1 Installation	46
3-5.2 Verification	47
3-6 Install LAN Drivers (85DR2-L / 85DR2+-L only)	48
3-6-1. RTL8139C LAN driver on Windows 9X	48
3-6-2. RTL8139C LAN driver on Windows NT4.0	50
3-6-3. RTL8139C LAN driver on Win ME / 2000 / XP	51
3-7 Install USB 2.0 Driver for Win2000 or WinXP	52
3-8 Install RAID Controller Driver (85DR2+ / 85DR2+-L) ..	55
Chapter 4 AMI BIOS Setup	56
4-1 About BIOS Setup	57
4-2 To Run BIOS Setup	57
4-3 About CMOS	57
4-4 The POST (Power On Self Test)	57
4-5 To Update BIOS	58
4-6 BIOS SETUP --- CMOS Setup Utility	60
4-6.1 CMOS Setup Utility	60
4-6.2 Standard CMOS Setup	61
4-6.3 Advanced BIOS Features	64
4-6.4 Advanced Chipset Features	67
4-6.5 Power Management Features	70
4-6.6 PNP / PCI Configurations	73
4-6.7 Integrated Peripherals	75
4-6.8 Hardware Monitor Status	78
4-6.9 Frequency/Voltage Control	80
4-6.10 Set Supervisor Password	82
4-6.11 Load Optimized Defaults	84
4-6.12 Save & Exit Setup	84
4-6.13 Exit Without Saving	84

Chapter 5 Disk Array	85
5-0 Before Creating Disk Array:	86
5-1 Creating Your Disk Array	87
5-1.1 Creating An Array For Performance	87
5-1.2 Creating A Security (Mirror) Array With New Drives	89
5-1.3 Creating Security Array With Existing Data Drive	91
5-2 Using FASTBUILDTM Configuration Utility	94
5-2.1 Viewing FastTrak133-Lite BIOS Screen	94
5-2.2 Navigating the FastBuildTM Setup Menu	95
5-2.3 Using the Main Menu	95
5-2.4 Creating Arrays Automatically	96
5-2.5 Viewing Drive Assignments.....	98
5-2.6 View an Array	98
5-2.7 Adding Fault Tolerance to an Existing Drive	99
5-2.8 Making a FastTrak133-Lite Disk Array Bootable	100
5-2.9 Creating a “Hot” Spare Drive for Mirroring Arrays	101
5-2.10 How FastTrak133-Lite Orders Arrays	102
5-2.11 How FastTrak133-Lite Saves Array Information	102
5-2.12 Deleting An Array	102
5-2.13 Rebuilding A Mirroring Array	104
5-2.14 Viewing Controller Settings	106
5-2.15 Halting FastTrak BIOS On Bootup Errors	106
5-3 Installing Drivers	107
5-3.1 For Windows 2000 / Windows XP	107
5-3.2 Windows 95/98	109
5-3.3 Installing Drivers With Existing Windows 95/98	111
5-3.4 DOS/Windows 3.1x	112
5-3.5 Windows NT4.0	113
APPENDICES	116
Appendix-1 Identify Mainboard Model Number	117
Appendix-2 Technical Terms	118