

# Contents

<b>Chapter 1 Specification .....</b>	<b>9</b>
1-1 Mainboard Components Locations .....	10
1-2 Mainboard Specifications .....	11
1-2.1 CPU Socket .....	11
1-2.2 Sysem Chipset .....	11
1-2.3 Memory .....	11
1-2.4 AMI BIOS .....	11
1-2.5 Multi-I/O Function .....	12
1-2.6 Expansion Slots .....	12
1-2.7 Sound Controller .....	12
1-2.8 CNR Slot on board .....	12
1-2.9 Hardware Monitoring .....	13
1-2.10 Power Management .....	13
1-1.11 Redstorm Overclocking Technology .....	13
1-2.12 Form Factor .....	13
1-4 Chipset System Block Diagram .....	14
<b>Chapter 2 Hardware Setup .....</b>	<b>16</b>
2-1 CPU Installation with Socket 478B .....	17
2-2 Pentium 4 CPU Fan Installation .....	18
2-3 Memory Installation .....	19
2-3.1 To Install DDR SDRAM Module for this Mainboard .....	19
2-3.2 To Remove a DIMM .....	19
2-4 AGP 4X Installed with Jumper and LED Safeguard .....	20
2-5 IDE Connector Installation .....	21
2-6 Flopy Drive Connector ( FDC ) Installation .....	22
2-7 ATX V 2.03 Power Supply Installation .....	23
2-8 Jumper Settings .....	24

2-8.1 Jp14: CPU Front Side Bus Select .....	25
2-8.2 JBAT1 Clear CMOS.....	26
2-8.3 Jp3 & Jp4 DIMM Voltage Select: .....	26
2-8.4 Jp2: 1.5V AGP4X Safeguard .....	27
2-8.5 JAGP1 & JAGP2: AGP Voltage Select .....	27
<b>2-9 Other Connectors Configuration .....</b>	<b>28</b>
2-9.1 On Board FAN Connectors .....	28
2-9.2 Connector WOL1: Wake On LAN.....	29
2-9.3 CD-ROM Audio Connectors (CD_In1/CD_In2) .....	29
2-9.4 Slot CNR: Communication And Networking Riser Slot.....	30
2-9.5 Chassis Panel Connectors .....	30
2-9.6 Thermal Sensor Connectors RT1 and RT2 .....	31
2-9.7 Complex Header .....	32
2-9.8 USB Ports and USB Header (Header USB 1) .....	34
2-9.9 PS/2 Mouse And PS/2 Keyboard .....	34
<b>2-10 IRQ Description .....</b>	<b>35</b>
<b>Chapter 3 Software Setup .....</b>	<b>37</b>
3-1 Open up the Support CD.....	38
3-2 Install “Intel Chipset Software Installation Utility” .....	39
3-3 Install “Intel Application Accelerator” .....	40
3-4 AC’97 Audio Driver Installation .....	42
3-5 Install Hardware Monitor Utility .....	43
3-5.1 Installation .....	43
3-5.2 Verification .....	44
<b>Chapter 4 AMI BIOS Setup .....</b>	<b>46</b>
4-1 About BIOS Setup .....	47
4-2 To Run BIOS Setup .....	47
4-3 About CMOS .....	47
4-4 The POST ( Power On Self Test ) .....	47

<b>4-5 To Update BIOS .....</b>	<b>48</b>
4-5.1 Before Update BIOS.....	48
4-5.2 Update Process .....	48
<b>4-6 BIOS SETUP --- CMOS Setup Utility .....</b>	<b>50</b>
4-6.1 CMOS Setup Utility .....	50
4-6.2 Standard CMOS Setup .....	51
4-6.3 Advanced BIOS Features .....	54
4-6.4 Advanced Chipset Features .....	57
4-6.5 Power Management Features .....	60
4-6.6 PNP / PCI Configurations .....	63
4-6.7 Integrated Peripherals .....	65
4-6.8 Hardware Monitor Status .....	68
4-6.9 Frequency/Voltage Control .....	70
4-6.10 Set Supervisor Password .....	72
4-6.11 Load Optimized Defaults .....	73
4-6.12 Save & Exit Setup .....	73
4-6.13 Exit Without Saving .....	74
<b>APPENDICES .....</b>	<b>76</b>
Appendix-1 Identify Mainboard Model Number .....	77
Appendix-2 Technical Terms .....	78