

Contents

Chapter 1 Specification	9
1-1 SL-85MIR / 85MIR-L Components Locations	10
1-2 Mainboard Specifications	11
1-2.1 CPU Socket	11
1-2.2 System Chipsets	11
1-2.3 Memory	11
1-2.4 AMI BIOS	11
1-2.5 Accelerated Graphics Port (AGP) Interface	11
1-2.6 VGA on board	12
1-2.7 Advanced System Power Management:	12
1-2.8 Multi-I/O Functions :	12
1-2.9 Expansion Slots	13
1-2.10 LAN (Local Area Network) on board (85MIR-L only)	13
1-2.11 Hardware Monitor on board	13
1-2.12 AC'97 Audio Codec on board	13
1-2.13 6-channel Audio-out Support (optional)	13
1-2.14 Form Factor	13
1-3 Mainboard Specification Table	14
1-4 Chipset System Block Diagram	15
Chapter 2 Hardware Setup	16
2-1 Pentium 4 CPU and Installation	17
2-1.1 To Identify a Pentium 4 CPU	17
2-1.2 CPU Installation with Socket 478B	18
2-2 Pentium 4 CPU Fan Installation	19
2-3 Memory Installation	20
2-3.1 To Install DDR SDRAM Module for this Mainboard	20
2-3.2 To Remove a DIMM	21

2-4 Install VGA / AGP4X with LED1 & Jp4 Safeguard	22
2-5 IDE Connector Installation	23
2-6 Flopy Drive Connector (FDC) Installation	24
2-7 ATX V 2.03 Power Supply Installation	25
2-8 Jumper Settings	26
2-8.1 JBAT1: Clear CMOS	27
2-8.2 Jp8: CPU Clock/Overclock Select	28
2-8.3 JAGP1 & JAGP2: AGP Voltage Select	29
2-8.4 JDIMM1 & JDIMM2: DIMM Voltage Select	29
2-8.5 Jp3: K/B or Power Button Select	30
2-8.6 Jp4: VGA/AGP4X Safeguard	30
2-9 Other Connectors Configuration	31
2-9.1 On Board FAN Connectors	31
2-9.2 Connector AUX1	32
2-9.3 CD-ROM Audio Connectors (CD 1).....	32
2-9.4 Chassis Panel Connectors	33
2-9.5 LAN Connector Rj45 (85MIR-L only)	33
2-9.6 Thermal Sensor Connectors RT2 and Jp11	34
2-9.7 Complex Header	35
2-9.8 USB Ports and USB Headers (Header USB2 & USB3)	37
2-9.9 PS/2 Mouse And PS/2 Keyboard	37
2-9.10 Connector WOL1: Wake On LAN	38
2-9.11 Audio 1: 6-channel Sound Output Connector (optional) ...	38
2-9.12 Pin-header COM 2: for one serial port	39
2-10 IRQ Description	40
Chapter 3 Software Setup	42
3-1 Open up the Support CD.....	43
3-2 Install “Intel Chipset Software Installation Utility”	44
3-3 Install “Intel Application Accelerator”	45

3-4 DirectX Installation.....	47
3-5 Graphics Driver Installation	48
3-6 AC'97 Audio Driver Installation.....	49
3-7 Install Hardware Monitor Utility	50
3-7.1 Installation	50
3-7.2 Verification	51
3-8 Install LAN Drivers (for 85MIR-L only)	52
3-8-1. RTL8139C LAN driver on Windows 9X	52
3-8-2. RTL8139C LAN driver on Windows NT4.0	54
3-8-3. RTL8139C LAN driver on Win ME / 2000 / XP	55
3-9 Install USB 2.0 Driver for Win2000 or WinXP	56
Chapter 4 AMI BIOS Setup	58
4-1 About BIOS Setup	59
4-2 To Run BIOS Setup	59
4-3 About CMOS	59
4-4 The POST (Power On Self Test)	59
4-5 To Update BIOS	60
4-5.1 Before Updating BIOS	60
4-5.2 Update Process	60
4-6 BIOS SETUP --- CMOS Setup Utility	62
4-6.1 CMOS Setup Utility	62
4-6.2 Standard CMOS Setup	63
4-6.3 Advanced BIOS Features	66
4-6.4 Advanced Chipset Features	69
4-6.5 Power Management Features	72
4-6.6 PNP / PCI Configurations	75
4-6.7 Integrated Peripherals	77

4-6.8 Hardware Monitor Status	80
4-6.9 Frequency/Voltage Control	82
4-6.10 Set Supervisor Password	84
4-6.11 Load Optimized Defaults	86
4-6.12 Save & Exit Setup	86
4-6.13 Exit Without Saving	86
APPENDICES	88
Appendix-1 Identify Mainboard Model Number	89
Appendix-2 Technical Terms	90