

# Contents

<b>Chapter 1 Specification .....</b>	<b>10</b>
<b>1-1 Mainboard Specifications .....</b>	<b>11</b>
1-1.1 CPU Socket .....	11
1-1.2 System Chipsets .....	11
1-1.3 Memory .....	11
1-1.4 AWARD BIOS V6.0 .....	11
1-1.5 Accelerated Graphics Port (AGP) Interface .....	11
1-1.6 Advanced system Power Management, supporting: .....	12
1-1.7 Multi-I/O Functions: .....	12
1-1.8 Expansion Slots .....	12
1-1.9 Hardware Monitor on board .....	13
1-1.10 AC'97 Audio Codec on board .....	13
1-1.11 CNR Slot on board .....	13
1-1.12 Redstorm Overclocking Technology .....	13
1-1.13 Form Factor .....	13
<b>1-2 Mainboard Specification Table .....</b>	<b>14</b>
<b>1-3 Chipset System Block Diagram .....</b>	<b>15</b>
<b>Chapter 2 Hardware Setup .....</b>	<b>17</b>
<b>2-1 CPU Installation with Socket 478 .....</b>	<b>18</b>
<b>2-2 Pentium 4 CPU Fan Installation: .....</b>	<b>19</b>
<b>2-3 Memory Installation .....</b>	<b>20</b>
2-3.1 To Install DDR SDRAM Module for this Series : .....	20
2-3.2 To Remove a DIMM: .....	21
2-3.3 Indicator ZD1 DIMM Socket On: .....	21
<b>2-4 AGP (Accelerated Graphics Port) Card Installation : ....</b>	<b>22</b>
<b>2-5 HDD/FDD Installation .....</b>	<b>23</b>

<b>2-6 ATX V 2.03 Power Supply Installation .....</b>	<b>25</b>
<b>2-7 Jumper and Switch Settings .....</b>	<b>26</b>
2-7.1 Switch 1 CPU Clock Select .....	27
2-7.2 JBAT1 Clear CMOS.....	28
2-7.3 Jp10 CPU Clock Select: .....	28
2-7.4 Jp16 Suspend to RAM (STR) .....	29
2-7.5 Jp11 Flash ROM Write Protection Select .....	29
<b>2-8 Other Connectors Configuration .....</b>	<b>30</b>
2-8.1 On Board FAN Connectors .....	30
2-8.2 WOL1 Wake On LAN .....	31
2-8.3 CD-ROM Audio Connector CD_IN1 .....	31
2-8.4 Chassis Panel Connector .....	32
2-8.5 Thermal Sensor Connector RT1, RT2 .....	33
2-8.6 Complex Header .....	34
2-8.7 Communication And Networking Riser Slot (CNR) .....	36
2-8.8 USB Ports and USB Headers (Header USB 2 & 3).....	37
2-8.9 PS/2 Mouse And PS/2 Keyboard .....	37
<b>2-9 IRQ Description .....</b>	<b>38</b>
<b>Chapter 3 Software Setup .....</b>	<b>40</b>
3-1 Open up Suport CD: .....	41
3-2 Proceed to VIA 4-IN-1 Drivers Installation .....	42
3-3 Proceed to AC'97 AUDIO Driver Installation .....	44
3-4 Proceed to Hardware Monitor Installation .....	45
<b>Chapter 4 BIOS Setup .....</b>	<b>48</b>
4-1 About BIOS Setup .....	49
4-2 To run BIOS Setup .....	49
4-3 About CMOS .....	49
4-4 The POST ( Power On Self Test ) .....	49

<b>4-5 To upgrade BIOS .....</b>	<b>50</b>
<b>4-5.1 Before Upgrading BIOS .....</b>	<b>50</b>
<b>4-5.2 Upgrade Process.....</b>	<b>50</b>
<b>4-6 BIOS SETUP --- CMOS Setup Utility .....</b>	<b>53</b>
<b>4-6.1 CMOS Setup Utility .....</b>	<b>53</b>
<b>4-6.2 Standard CMOS Setup .....</b>	<b>54</b>
<b>4-6.3 Advanced BIOS Features .....</b>	<b>57</b>
<b>4-6.4 Advanced Chipset Features .....</b>	<b>61</b>
<b>4-6.5 Integrated Peripherals .....</b>	<b>66</b>
<b>4-6.6 Power Management Setup .....</b>	<b>72</b>
<b>4-6.7 PNP / PCI Configuration .....</b>	<b>78</b>
<b>4-6.8 SmartDoc Anti-burn Shield (PC Health status) .....</b>	<b>81</b>
<b>4-6.9 Frequency/Voltage Control .....</b>	<b>83</b>
<b>4-6.10 Load Optimized Defaults .....</b>	<b>85</b>
<b>4-6.11 SET SUPERVISOR / USER PASSWORD.....</b>	<b>86</b>
<b>4-6.12 SAVE &amp; EXIT SETUP .....</b>	<b>87</b>
<b>4-6.13 EXIT WITHOUT SAVING .....</b>	<b>87</b>