

CONTENT

ITEM CHECKUP	8
Chapter 1 Specification	9
1-1 Mainboard Specifications	10
1-1.1 CPU Socket	10
1-1.2 System Chipsets	10
1-1.3 Memory	10
1-1.4 AWARD BIOS V6.0	10
1-1.5 Accelerated Graphics Port (AGP) Interface	10
1-1.6 Advanced system Power Management, supporting:	11
1-1.7 Multi-I/O Functions:	11
1-1.8 Expansion Slots	11
1-1.9 Hardware Monitor on board	12
1-1.10 AC'97 Audio Codec on board	12
1-1.11 CNR Slot on board	12
1-1.12 Disk RAID (Redundant Array of Independent Disks)	12
1-1.13 Voice Diagnostic Technology	12
1-1.14 Form Factor	12
1-2 Series SL-85DRV -- Layout with Optional Features	13
1-3 Mainboard Specification Table	14
1-4 Chipset System Block Diagram	15
Chapter 2 Hardware Setup	17
2-1 CPU Pentium 4 Installation with Socket 478	18
2-2 Pentium 4 CPU Fan Installation:	19
2-3 Memory Installation	20
2-3.1 To Install DDR SDRAM Module for this Series :	20
2-3.2 To Remove a DIMM:	21
2-3.3 Indicator ZD1 DIMM Socket On:	21
2-4 AGP 4X (Accelerated Graphics Port) Card Installation : ..	22
2-5 HDD/FDD Installation	23

2-6 ATX V 2.03 Power Supply Installation	25
2-7 Jumper and Switch Settings	26
2-7.1 Switch 1 CPU Clock Select	27
2-7.2 JBAT1 Clear CMOS	28
2-7.3 Jp12 RAID Controller Select:	28
2-7.4 Jp18 Voice Diagnostic Language Select	29
2-7.5 Jp16 Suspend to RAM (STR)	30
2-7.5 Jp11 Flash ROM Write Protection Select	30
2-8 Other Connectors Configuration	31
2-8.1 On Board FAN Connectors (FAN1,FAN2, FAN3)	31
2-8.2 WOL1 Wake On LAN	32
2-8.3 CD-ROM Audio Connector (CD_IN1/CD_IN2)	33
2-8.4 Chassis Panel Connector	33
2-8.5 Thermal Sensor Connector (RT2)	34
2-8.6 Complex Header NJP1	35
2-8.7 ATX Power Supply Connectors for Pentium 4	37
2-8.8 Communication And Networking Riser Slot (CNR)	38
2-8.9 USB Ports and USB Headers (Header USB 2 & 3)	39
2-8.10 PS/2 Mouse And PS/2 Keyboard	39
2-9 IRQ Description	40
Chapter 3 Software Setup	42
3-1 Open up the Suport CD and choose Drivers and Utilities: .	43
3-2 Proceed to VIA 4-IN-1 Drivers Installation	44
3-3 Proceed to AC'97 AUDIO DRIVER Installation	46
3-4 Proceed to HARDWARE MONITOR Installation	47
3-5 Install Driver for Promise RAID Controller	49
Chapter 4 BIOS Setup	51
4-1 About BIOS Setup	52
4-2 To run BIOS Setup	52
4-3 About CMOS	52
4-4 The POST (Power On Self Test)	52

Series SL-85DRV

4-5 To upgrade BIOS	52
4-5.1 Before Upgrading BIOS	52
4-5.2 Upgrade Process	52
4-6 BIOS SETUP --- CMOS Setup Utility	57
4-6.1 CMOS Setup Utility	57
4-6.2 Standard CMOS Setup	58
4-6.3 Advanced BIOS Features	61
4-6.4 Advanced Chipset Features	65
4-6.5 Integrated Peripherals	70
4-6.6 Power Management Setup	76
4-6.7 PNP / PCI Configuration	82
4-6.8 SmartDoc Anti-burn Shield (PC Health status)	85
4-6.9 Frequency/Voltage Control	87
4-6.10 Load Optimized Defaults	89
4-6.12 SET SUPERVISOR / USER PASSWORD	90
4-6.13 SAVE & EXIT SETUP	91
4-6.14 EXIT WITHOUT SAVING	91
Chapter 5 RAID Controller	93
5-0 Before Creating Disk Array:	94
5-1 Creating Your Disk Array	95
5-1.1 Creating An Array For Performance	95
5-1.2 Creating A Security (Mirror) Array With New Drives	97
5-1.3 Creating Security Array With Existing Data Drive	99
5-2 Using FASTBUILDTM Configuration Utility	102
5-2.1 Viewing FastTrak100-Lite BIOS Screen	102
5-2.2 Navigating the FastBuildTM Setup Menu	103
5-2.3 Using the Main Menu	103
5-2.4 Creating Arrays Automatically	104
5-2.5 Viewing Drive Assignments	106
5-2.6 View an Array	106
5-2.7 Adding Fault Tolerance to an Existing Drive	107
5-2.8 Making a FastTrak100-Lite Disk Array Bootable	108
5-2.9 Creating a "Hot" Spare Drive for Mirroring Arrays	109

Content

5-2.10 How FastTrak100-Lite Orders Arrays	110
5-2.11 How FastTrak100-Lite Saves Array Information	110
5-2.12 Deleting An Array	110
5-2.13 Rebuilding A Mirroring Array	112
5-2.14 Viewing Controller Settings	114
5-2.15 Halting FastTrak BIOS On Bootup Errors	114
5-3 Installing Drivers	115
5-3.1 For Windows 2000	115
5-3.2 Windows 95/98	117
5-3.3 DOS/Windows 3.1x	120
5-3.4 Windows NT4.0	121